

# IS-5000 & IS-6000 PPI INSTALLATION


## IS-5000



## IS-6000



Please find attached your PPI USB key, please use the following instructions to install your PPI onto your mailing machine.


Ensure the machine is awake by checking the sleep/reset key  is showing green.

1. From the "HOME SCREEN" press the "MENU" key.
2. Select the "SUPERVISOR" option from the list.
3. Enter the "SUPERVISOR PIN" (meter specific) and press "OK".
4. From the SUPERVISOR menu select "OPTIONS & UPDATES".
5. In the following screen select "PPI MANAGEMENT".

## IS-5000



## IS-6000

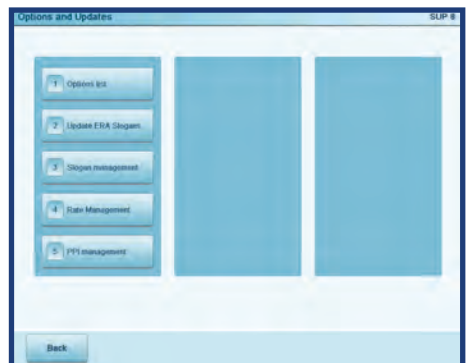


6. In the "PPI MANAGEMENT" screen there will be 5 spaces for PPI's, select "ADD NEW".

### IS-5000



### IS-6000

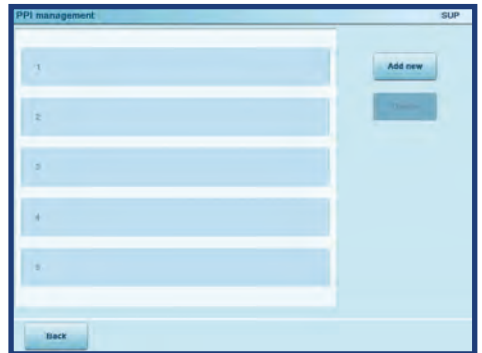


7. The machine will prompt you to "INSERT YOUR USB KEY", insert the USB key into one of the free USB ports on either side of the base.




8. Once the USB key has been entered press "OK".

9. The machine will display the file on the key, select it and press "OK".



## IS-5000

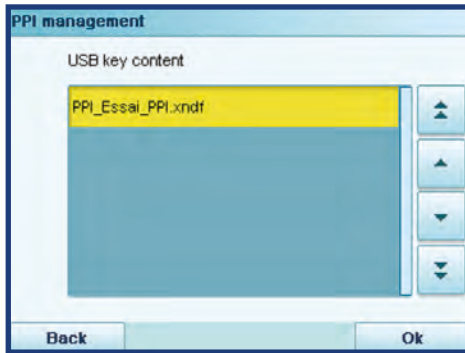


## IS-6000

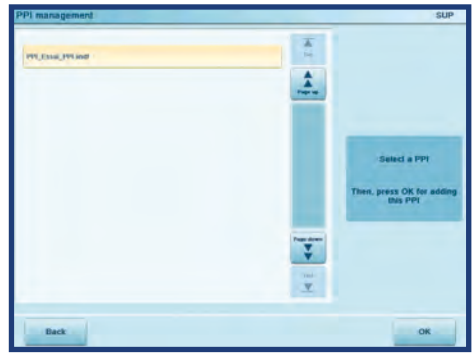

10. When the download is successful, the machine will display a "PPI DOWNLOAD IS SUCCESSFUL" message, press "OK" and remove the USB key.
11. In the PPI management screen you will see one of the slots occupied by the new PPI.

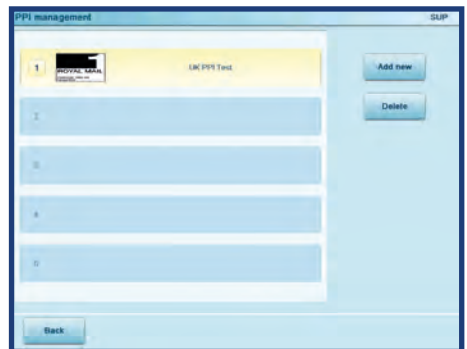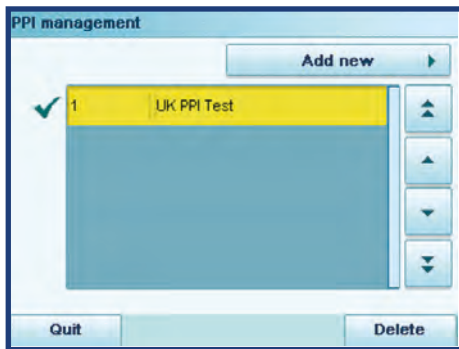

12. PPI download is done. If you have more PPI dies to load please repeat steps 7 – 12, otherwise return to the main user screen by pressing the sleep/reset button  twice.



4152127G/A - 01/02/2015